



# MOTORTRONICS™

*Solid State AC Motor Control*

# VMX-synergy™

**IP 66 REMOTE KEYPAD USER GUIDE**



# **VMX-SGY-010-N4**

## **User Guide**

---

**Motortronics UK Ltd**  
**Bristow House**  
**Gillard Way**  
**Ivybrdge, UK**

**[www.motortronics-uk.co.uk](http://www.motortronics-uk.co.uk)**

© 2019 by Motortronics UK Ltd all rights reserved  
Copyright subsists in all Motortronics UK Ltd deliverables including magnetic, optical and/or any other soft copy of these deliverables. This document may not be reproduced, in full or in part, without written permission. Enquiries about copyright of Motortronics UK Ltd deliverables should be made to Motortronics UK Ltd. If, by permission of the copyright owner, any part of this document is quoted, then a statement specifying the original document shall be added to the quotation. Any such quotation shall be according to the original (text, figure or table) and may not be shortened or modified.

---

# Remote Keypad Setup VMX-SGY-010-N4


---


## Introduction


The remote keypad (VMX-SGY-010-N4) can be used to control, monitor and program up to 32 VMX-synergy™ soft starters.

The remote unit is powered from the host VMX-synergy™ and requires only an Ethernet cable for communication.

## Installation

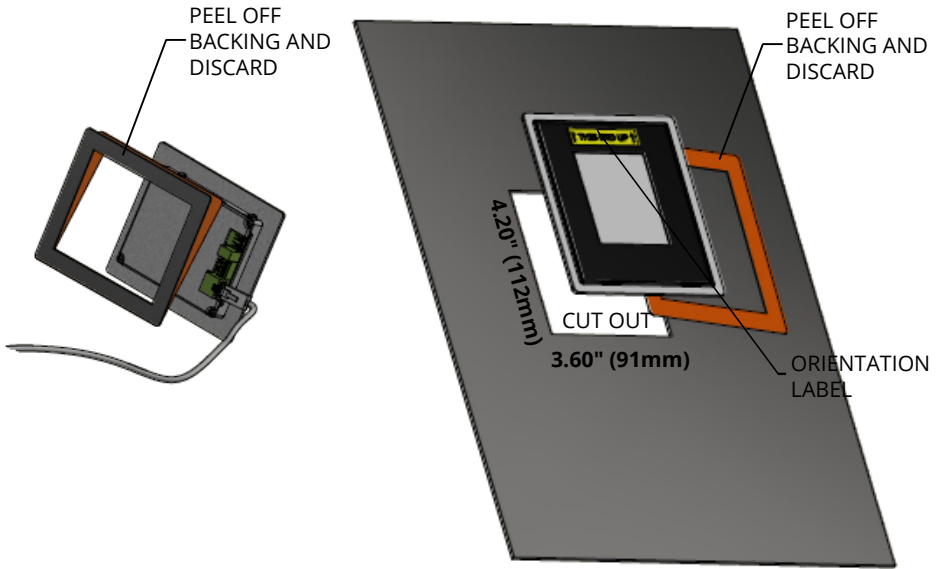

 The remote keypad can only be used with the standard 'on-board' Modbus RTU connection. It cannot be used with Anybus modules.

 The remote touchscreen is a Modbus RTU master device. A PLC, HMI, or other Modbus Master device cannot be used on the same network while the remote touchscreen is connected.

---


# Remote Keypad Setup (Continued)

---

## Network Connection

Keypad to one VMX-synergy™ unit


For a configuration where there is only one VMX-synergy™ unit (one-to-one the remote and main unit can be directly cabled. See Diagram below:

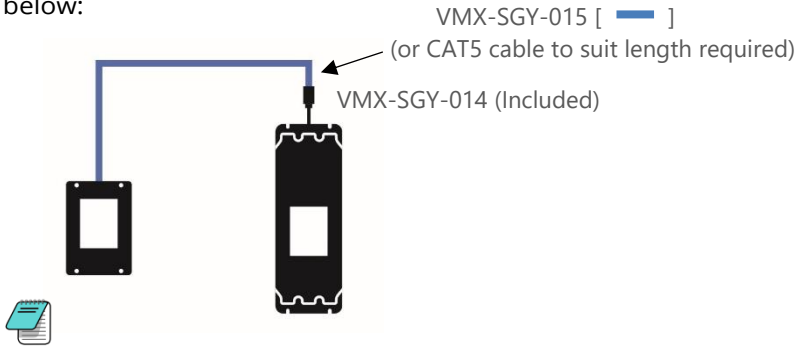

A RJ45 to RJ12 adaptor cable is included as part of the kit (PN: VMX-SGY-014). The use of this adapter is recommended to ease network installation and reduce the possibility of incorrect wiring.

## Keypad to multiple VMX-synergy™ unit

For multiple base units connected to the keypad, the use of VMX-SGY-011 is highly recommended. See diagram below.

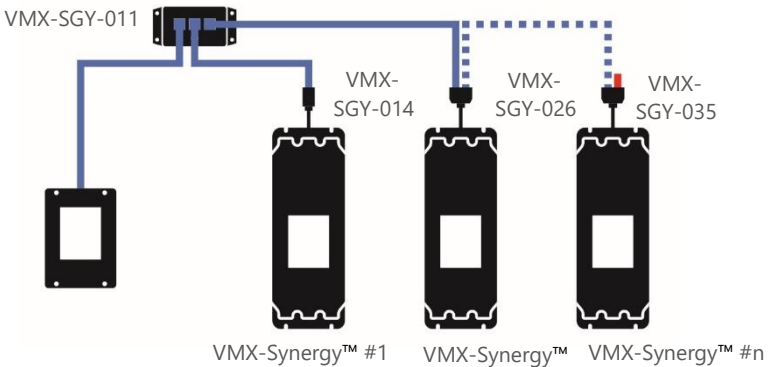

---

# Remote Keypad Setup (Continued)

---

## Remote Keypad Operation

Ensure starter's Modbus Network Settings are: Even parity and 19200 baud rate. If connecting to multiple starters, set the Address to a unique number for each VMX-synergy™ starter.

If remote touchscreen start/stop control is desired, set the Control Method to Modbus Control. If the remote touchscreen will only be used for monitoring or configuration (digital input or local touchscreen start/stop control will be used), select the appropriate setting (Local Touchscreen, User Programmable, 2-wire control, or 3-wire control).

Connect remote touchscreen using the VMX-SGY-014 adapter (VMX-synergy™ end) and a standard Ethernet patch cable. If connecting to multiple starters, a Modbus splitter (VMX-SGY-011) will be required for the first starter. VMX-SGY-026 may be used for the remaining units

On the remote touchscreen go to Modbus Network Settings as shown in Fig 1. and select Scan Bus. This will show all the VMX-synergy™ starters on the bus (Fig 2). Select which starter you wish to connect to. Alternatively, you can select the Address number and then select "Connect" to connect to that particular starter.

The status screen Fig 3 on the remote touchscreen will display the current starter it is connected to, by displaying the starter's node address and serial number (Example: address 01 and serial number A0167805).



Figure 1.



Figure 2.



Figure 3.

---

## Remote Keypad Setup (Continued)

---

The remote touchscreen's control for starting and stopping overrides the starter's onboard touchscreen when the starter's Control Method is set to Modbus Control. Menu navigation, configuration, and monitoring are still possible on the starter's touchscreen.

Press the starter icon box on the Status screen of the remote touchscreen to change to another starter if controlling multiple starters from one remote touchscreen.

When using the remote touchscreen for start/stop control the remote touchscreen has full control, configuration, and monitoring capabilities, while the local touchscreen on the starter only has configuration and monitoring capabilities. Digital outputs always function as programmed, regardless of Control Mode. Digital inputs are disabled during Modbus Control and Keypad Control Modes, but are active during all other Control Modes.

The remote touchscreen can be used for monitoring and configuration during any other control method besides Modbus Control.

### **California Customers:**

#### **California Proposition 65 Warning**

WARNING: this product and associated accessories may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information visit <https://p65warnings.ca.gov>

---

# Notes

---



**MOTORTRONICS™**  
*Solid State AC Motor Control*

VMX-synergy™

## **IP 66 REMOTE KEYPAD USER GUIDE**

MotortronicsUKLtd Bristow House  
GillardWay  
Ivybridge,UK

+44(0)1752894554

[www.motortronics-uk.co.uk](http://www.motortronics-uk.co.uk)